

Instructions for

GUNDLACH

No. CB900 Butane Glue Gun

Using Glue Guns has never been so easy!



Temperature 400°F (204°C)

Specifications

 
Gun Size:	10" long x 11" high x 2.5" wide (254 x 279 x 63 mm)
Gun Weight:	1.65 lbs. (.75 kg.)
Temperature:	400°F (204°C) max
Power Source:	Butane Fuel
Fuel Capacity:	2 oz. (56 g.)
Melt Capacity:	3.9 lbs./hr. (About 70 each ½" diameter x 10" long Gundlach 440 Series Glue Sticks.)
Heating Time:	3 minutes
Burn Time:	About 2½ hours on a full fuel tank, depending on usage.

One Year Warranty

This product is warranted to be free of manufacturer's defects in workmanship and material for one year, unless otherwise noted on the package, beginning from the date of original retail purchase. This warranty does not cover any damage resulting from accident or misuse. If the product becomes defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, provided it is delivered, transportation charges prepaid, to Beno J. Gundlach Company, at the address shown on the back page of these instructions, with proof of purchase. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Beno J. Gundlach Company shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on the product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to one year from date of purchase.

portasol®

Parts Identification

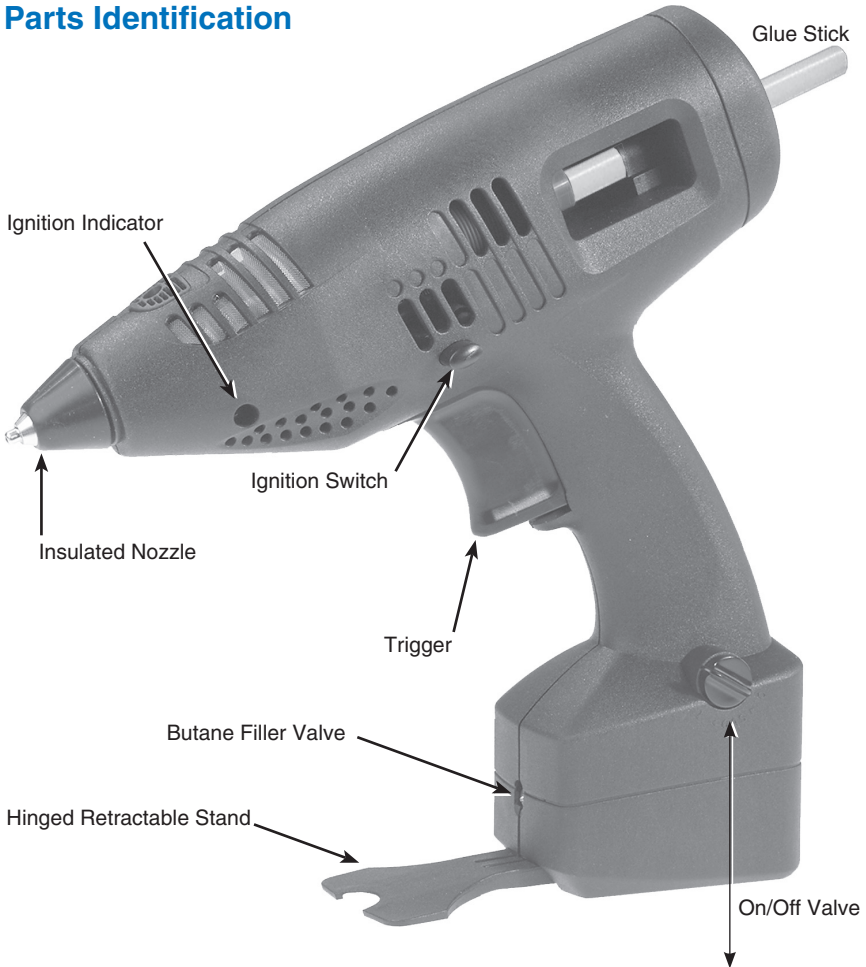

Butane Fuel Refilling

1. Use Ronson® brand butane fuel or equivalent.
2. Before refilling, shut off gun by turning the On/Off Valve to the '0' (Off) position (Figure 1).
3. Follow the directions on the butane fuel can. Hold the gun vertically with the Butane Filler Valve up (Figure 2). Slide open the red filler valve dust cover. Insert the butane canister tip into the filler valve and hold there until tank is full (when the butane "spits").
4. After filling, allow the butane to stabilize for one minute before igniting the gun.
5. It may be necessary to repeat Steps 3 and 4 up to three times.

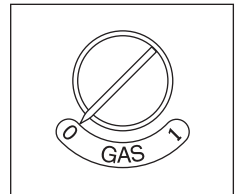 


Figure 1



Figure 2

Operation

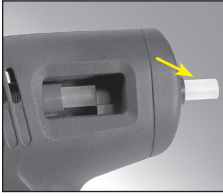 


Figure 3

1. Insert a glue stick into inlet tube (Figure 3).

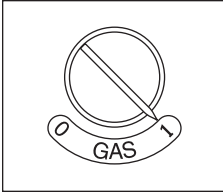 


Figure 4

2. In a well ventilated area away from ignition sources, turn the On/Off Valve to the '1' (On) position (Figure 4). A hissing sound indicates butane flow.



Figure 5

3. Push the Ignition Switch to start the glue gun (Figure 5). Glue gun should start on first or second try.

Note: Butane is sometimes difficult to ignite at high elevations.

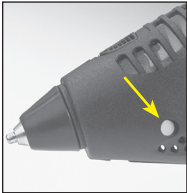 


Figure 6

4. The Ignition Indicator will glow red indicating the gun is heating (Figure 6). Once the gun has reached maximum temperature, the indicator will cycle on and off as the gun heats under thermostat control.

Caution: If the gun goes off, wait about 15 seconds before attempting to restart it.

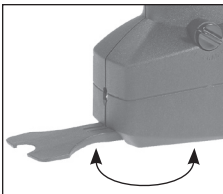 


Figure 7

5. After starting, unfold stand from base and stand gun upright (Figure 7).

Note: It takes about 5 minutes for the gun to heat up, allowing the glue to melt.

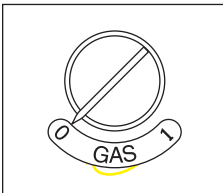 


Figure 8

6. To shut the gun off, turn the On/Off Valve to the '0' (Off) position (Figure 8).

7. Apply glue to any clean and dry surface you wish to bond. Release trigger to stop flow of glue.

Safety Information

- Please read directions carefully before use.
- Keep the glue gun out of children's reach.
- The nozzle gets hot when in operation—temperature can reach 400°F (204°C). Do not touch the nozzle or melted glue, or place them on flammable objects.
- Always have a fire extinguisher or bucket of water near the work area.
- Always wear safety glasses when using the glue gun.
- Always point the gun away from eyes and body when turning it on or operating.
- Never attempt to repair a damaged glue gun.
- Do not store under direct sunlight, or anywhere that temperatures exceed 104°F (40°C).
- Do not immerse in water.
- Make sure the gun's On/Off Valve is in the '0' (Off) position before storing.
- Use only glue sticks designed for use with glue guns. Never use liquid or paste adhesive.
- Allow glue gun and nozzle to cool before storing or leaving unattended.
- Do not pull partially melted glue stick from gun. This can cause glue to jam the feed mechanism. Partial glue sticks should be left in place or cut off at rear of gun.

Proposition 65, USA, CA.

Warning: By-products of the combustion of the fuel used by this product contain chemicals known to State of California to cause cancer and reproductive harm.

U.S. Department of Transportation

Hazardous Materials Regulations forbid the carriage of butane or other flammable gas products on passenger aircraft. Do not pack this item, or any other flammable gas item, in any checked or carry-on baggage.

Troubleshooting

PROBLEM	PROBABLE CAUSE	SOLUTION
Does not start	Empty fuel	Refill with butane fuel
Sluggish glue flow	Empty or low fuel	Refill with butane fuel



Beno J. Gundlach Company

211 North 21st Street • P.O. Box 544
Belleville, IL 62222 • U.S.A.
TEL: 618 233-1781 • FAX: 618 233-3636
www.benojgundlachco.com